

## **Banners-For-All**

Cottage in the Wood  
Parsonage Lane  
Famham Common  
Buckinghamshire  
SL2 3PA

Phone 01753 646667 FAX 01753 644558 [textile@bannersforall.co.uk](mailto:textile@bannersforall.co.uk)

### **Sail Banners**

Contents Sail Banner Telescopic Whip (pole)

(If ordered) Ground Stake 1000mm x 10mm (appx.) stainless steel rod and white plastic swivel plate.  
Elastic ball tie [Assembly](#)

Drive the Stake vertically into the ground to a maximum depth of 500mm (20 inches).

### **Please be aware of underground utilities.**

Place the white plastic swivel plate over the ground stake and drop to ground level.

Remove and retain the rubber plug at the top of the Telescopic Whip. Pull out the sections starting with the smallest diameter. Lock each section in the telescopic sequence with the next with a sharp pull. Continue until the whip is fully assembled.

Insert the tip of assembled Whip into the sewn pole pocket at the bottom corner of the Sail Banner. Push the Whip into the pole pocket until it reaches the very top of the Sail. **Take a few seconds to ensure the tip of the whip is located into the reinforced section at the top of the Sail.**

Loop the elastic ball tie through the tag at the base of the sail and round the pole to secure with slight downward tension.

Unscrew and retain the cap at the base of the Whip. Place the Whip over the Ground Stake and onto the swivel plate.

### **Be aware of overhead utilities.**

**The Sail Banner must be allowed to rotate freely at all times.**

Dismantle in the reverse order taking care not to loose the black plastic tip protector.

**Important Note.** Sail Banners are not intended for use where wind speeds exceed fifteen miles per hour.